# Rolling Codes Radio Remote

# **ROLL & COPY**

Item Art.	DIP switch selection Combinación de DIPs Sélection DIP	Brand Marca Marque	Buttons Botones Bouton	
1		Brand 0 UNIVERSAL FIXED CODE	TXF	
2		Brand 1 <b>DITEC</b>	TX D	PUR
3		Brand 2 FAAC SLH 433mhz led blù	TXFA433	PAAC .
4		Brand 3 <b>CLEMSA</b> Mastercode	TXC433	Mastercode
5		Brand 4 MARANTEC	TXMR433	
6		Brand 5 UNIVERSAL ROLLING CODE	тхн	



Brand 6

V2

TXV



## Superior Radio •) Remote

"Roll & Copy turns into your new original RadioRemote in few simple steps"

















### **PROGRAMMING ROLL & COPY:**

PLEASE PLACE FIRST DIP ON THE LEFT UP (position ON)

### **USING ROLL & COPY:**


ONCE THE COPY IS DONE, PLEASE SET BACK THE FIRST DIP ON THE LEFT **DOWN** (position OFF)



# Rolling Codes Radio Remote

## **ROLL & COPY**

# INSTRUCTION MANUAL

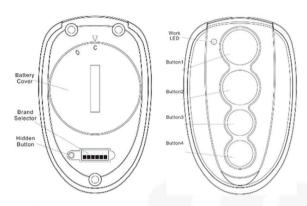



Roll and Copy is a learning remote control that requires to set the dip-switches on the back according to the enclosed list.

#### 1. Programming

The 1st. Dip-switch enables the learning mode on ON (upwards) after duplication must be placed again on OFF (downwards).

#### 2. Duplication of the original remote control

- a) remove rubber cover behind in order to access dip-switch compartment
- b) select dip-switch position according to your original remote control
- c) 1st dip-switch must be "ON" during copy
- d) Place the 2 remote controls as closed to each other as possible keeping pressed the original key ("button") and afterwards the key selected on your new Roll & Copy
- e) When the LED of your new Roll & Copy starts flashing wait a few seconds, copying has been succesfull

#### 3. \*\*IMPORTANT to copy FAAC SLH Blue LED

For this model please repeat from a) to c) then as follows:

- d) On the FAAC SLH blue LED keep pressed together the 2 keys for a few seconds and release, blue LED must keep on flashing
- e) place the 2 remote controls closed to each other and press first the key of the FAAC SLH to be copied and afterwards the key of the Roll & Copy, wait that its LED starts flashing and wait a few seconds, then copy process has been done..

#### IMPORTANT FAAC SLH:

Please place FAAC SLH below at 90° at about 2 cm from your new Roll & Copy. SLH might require pressing the key many times (1-25 times) closed to the receiver in order to synchronize codes.

If you wish to enter additional remote controls from the Roll & Copy list, repeat operation from a) to e)

#### Working mode remote control Roll & Copy

Place Dip-switch 1 in the OFF position.

#### 4. Other functions

Erasing codes: Keep pressed the keys 1-2, after LED starts flashing code has been cancelled Factory Reset: Keep pressed the keys 3-4 and wait until LED flashes slowly, wait 10 seconds more until LED flashes fast.



GUARANTY— The producer's warranty runs, in compliance with legislation, from the date printed on the product and it is limited to the free repair or replacement of parts that the producer acknowledges to be defective because of deficiencies in essential material properties or manufacturing faults. The producer accepts no responsibility for damage or faults that are due to external agents or incorrect installation or maintenance of the product, overload, natural wear and tear or other causes for which the producer is not responsible. Products that have been tampered with are not covered by warranty. The information is provided for guidance only. The producer is not responsible for any reductions in product range or for faults that are due to environmental interference. The producer's liability for accidents of any kind to any person that are due to fault sin our product is defined exclusively by European law.

## Superior Radio 1) Remote





"Roll & Copy turns into your new original RadioRemote in few simple steps"



VISIT OUR
WEBSITE TO
DISCOVER
BRAND NEW
PRODUCTS

